

DOZUKI

Using Your Dyson DCO7 Vacuum

Written By: Brian Sallee



PARTS:

- [Dyson DC07 Vacuum \(1\)](#)

SUMMARY


READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

Step 1 — Getting Started




- Your new DC-07 includes a Wand, Hose, Vacuum, Stair Tool, Brush Tool, and Crevice Tool.

Step 2 — Getting to Know Your New Vacuum

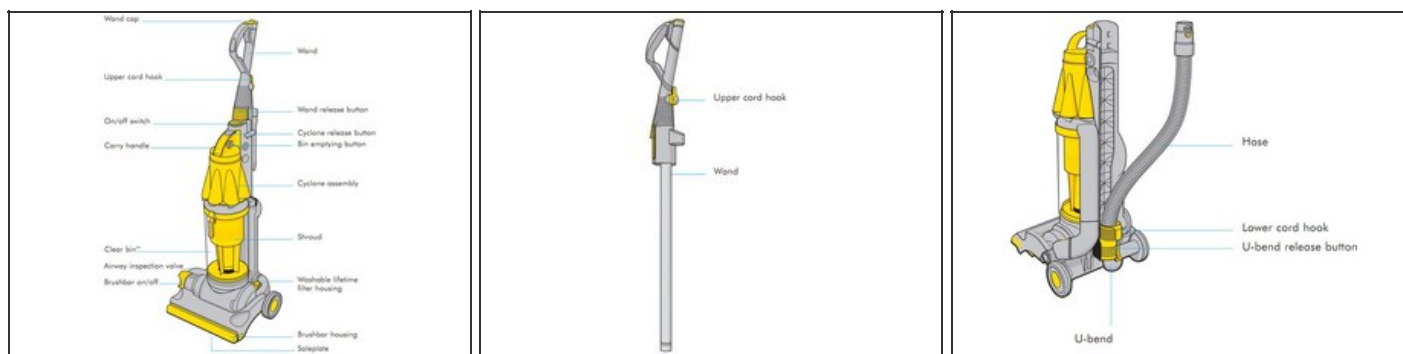

No instructions yet.

Step 3 — Assembling your DCO7

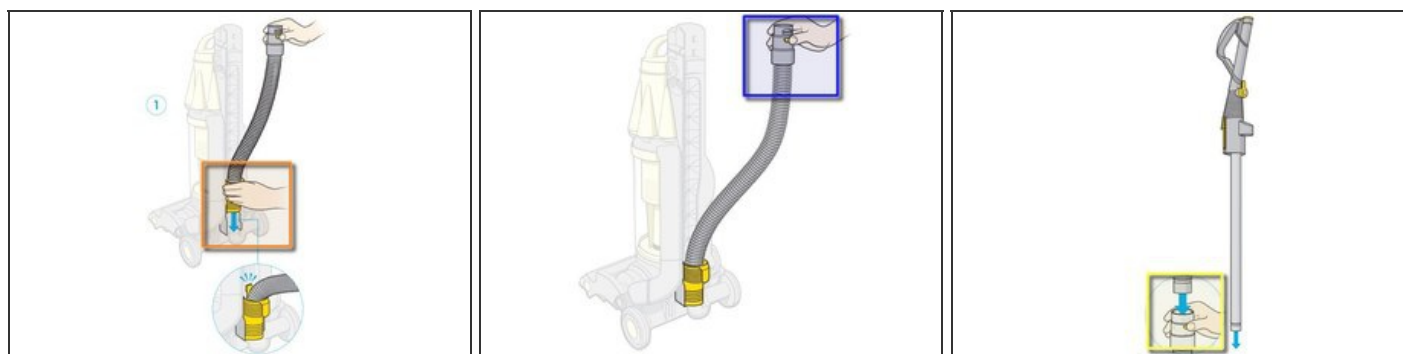

- If you need assistance during assembly or operation, please call the Dyson Helpline at 1-866-693-9766
- Slide the hose into the guides at the back of the machine, and click into place.
- Press the hose release button.
- Slide the wand down inside the hose.



Step 4



- Slide the wand into the top of the machine until it clicks securely into place. You may need to press firmly and should hear a 'click' sound.
- Push the brush and stair tools securely into the storage holes on either side of machine. Fit the crevice tool into the tool clip on the back of the wand.
- Store the cord safely by winding it counter-clockwise around the cord winders and securing with the cord clip.
- Tip: To quickly release cord, rotate upper cord hook downward. Twist back up before rewinding cord.




Step 5 — Switching On/Off



- Make sure you have read and understood all safety instructions before using the machine for the first time. The wand cap should be closed when not using the tools.
- Plug into electrical outlet and press the on/off switch.
- To start vacuuming, push the front of the cleaner head down with your foot and tilt the handle backward.




Step 6 — Transporting your Dyson

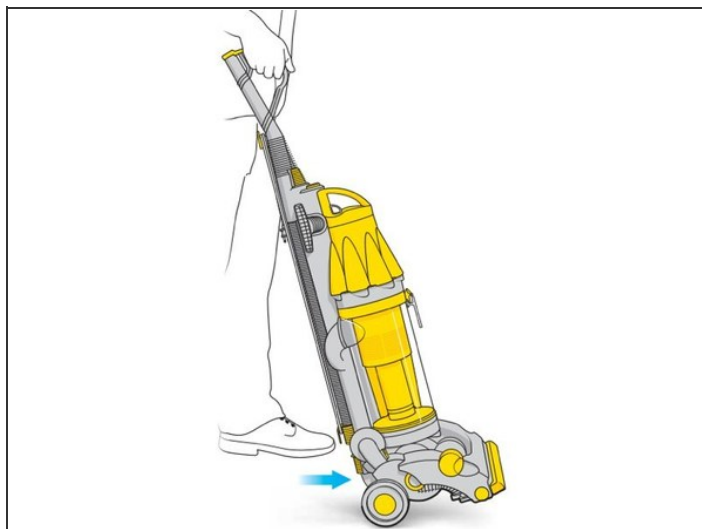

- To move the machine from room to room, ensure it is upright, with the cord stored on the cord winders and the wand securely in place. Tilt back on the rear wheels and push forward.
- Carrying your DCO7: Your DCO7 should be lifted by using the carry handle.
- C A U T I O N • Do not shake the machine when carrying. • For your safety do not press the cyclone release catch when carrying your machine.





Step 7 — Brush Control System

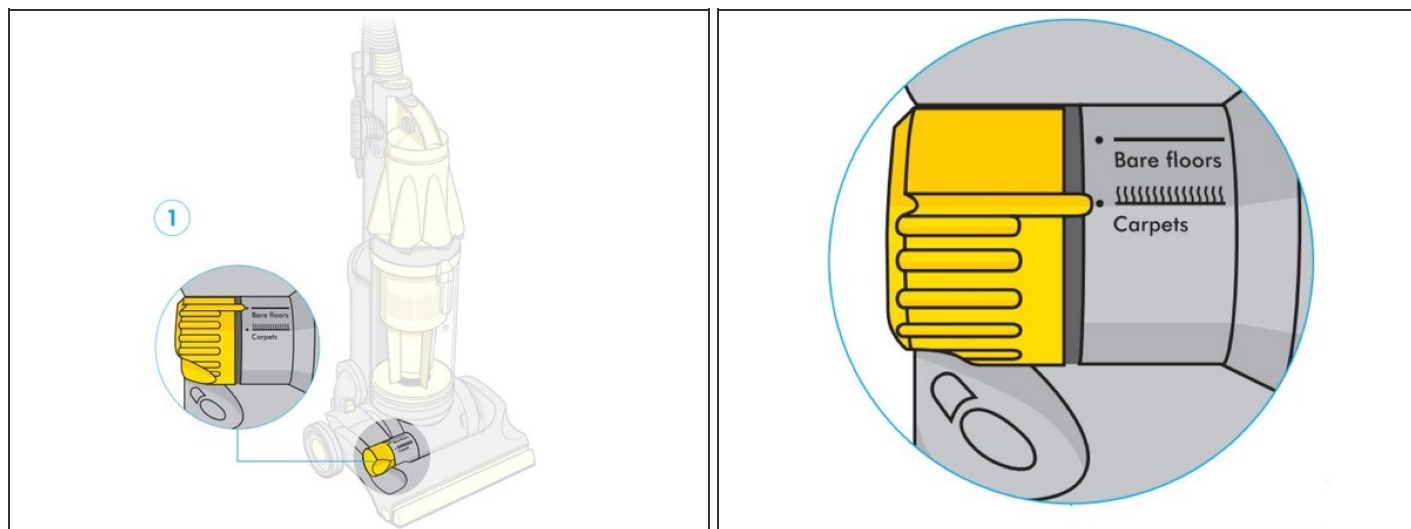


- Ensure the machine is in an upright position before adjusting the setting.
- **Bare floors:** Use this setting to stop brushbar from turning when vacuuming bare floors and delicate floors, rugs, and carpets.
- **Carpet:** Use this setting so brushbar turns when vacuuming non-delicate surfaces.
- **Tip:** The brushbar will not turn until you tilt the handle backward to begin vacuuming.




Step 8 — Washing Your Filter

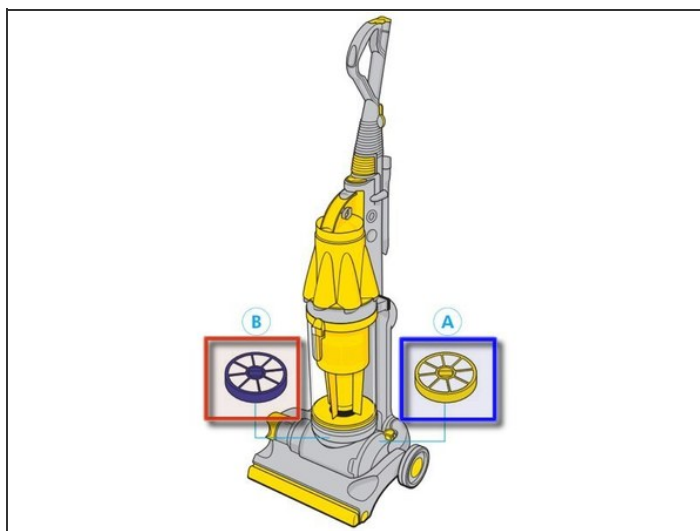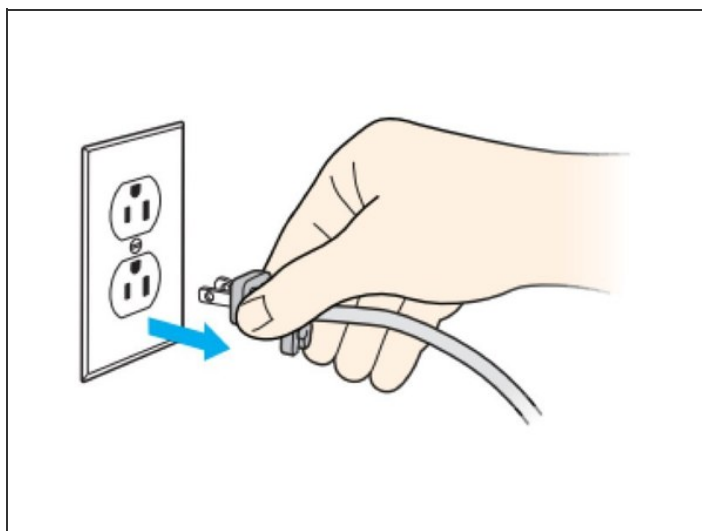

- **Caution:** Turn power off and unplug before washing filter. Failure to do so could result in electric shock or personal injury. 
- **Lifetime washable filter:** Check your washable filter regularly and wash at least every 6 months according to instructions to maintain performance.
- **Lifetime HEPA filter:** This is a permanent lifetime filter. Do not remove or attempt to rinse this filter.

Step 9 — Removing washable filter

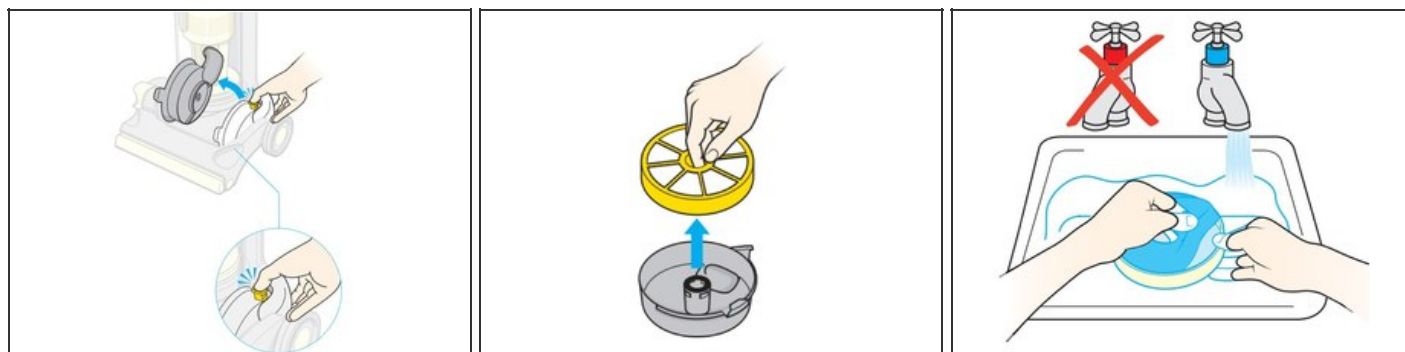

- Press the filter release catch to remove the filter housing from the machine.
- Remove the filter from the housing.
- Only the blue foam pad and the yellow case should be rinsed – do not wash the filter housing.
- Submerge the foam pad and case in cold water and rinse thoroughly.
- • Rinse in cold water only. • Do not use detergent. • Do not put in a washing machine or dishwasher.




Step 10



- Rinse the blue foam pad and squeeze gently, repeating until the water runs clear.
- Rinse the yellow case and tap firmly, repeating until the water runs clear.
- Leave in a warm place to dry for 12 hours. Make sure the filter is completely dry before replacing in the machine.
- • Do not dry in an oven or microwave. • Do not dry in a clothes dryer. • Do not dry near an open flame.



Step 11

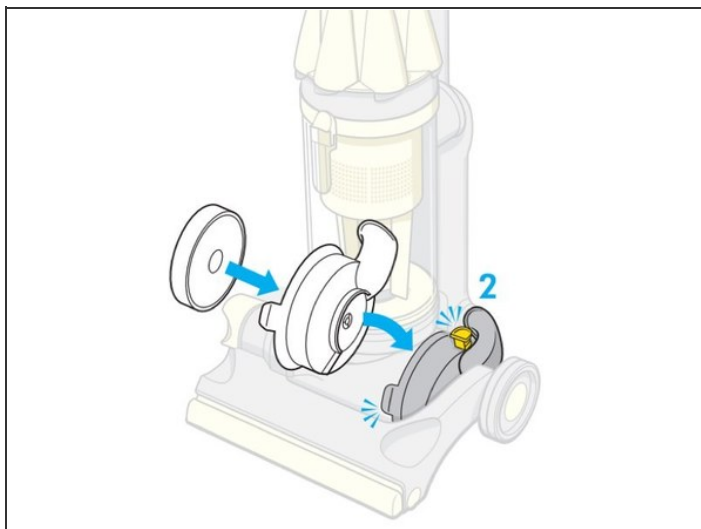

- When the blue foam pad and yellow case are completely dry, place the foam pad in the case and replace in the filter housing. Click back into machine, pressing points **1** and **2** firmly to secure.
- Do not use the machine without the filter in place.



This document was last generated on 2012-11-17 04:27:22 PM.